 


BEST MEDIA

BM-2000

USER'S MANUAL

Safety Information

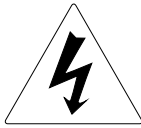

The lightning flash with arrowhead symbol, within an equilateral triangle. Is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that maybe of sufficient magnitude to constitute a risk of electric shock to persons.



 
The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK , DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE ◦


IMPORTANT SAFRTY INSTRUCTIONS

1. Read these instructions
2. Keep these instructions
3. Heed all warning
4. Follow all instructions
 - A. Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus that produces heat.
 - B. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
 - C. Only use attachments/accessories specified by the manufacturer.

Accessories

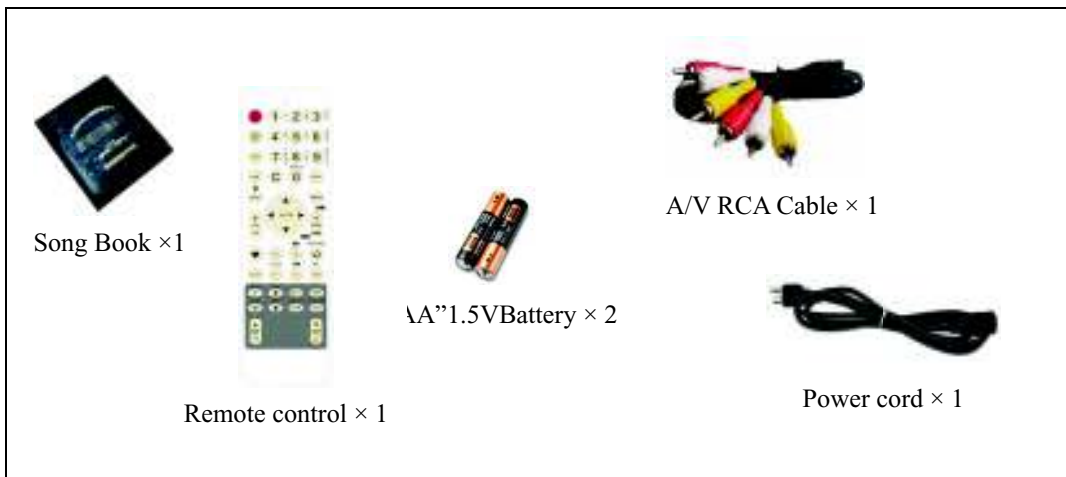

Remote control

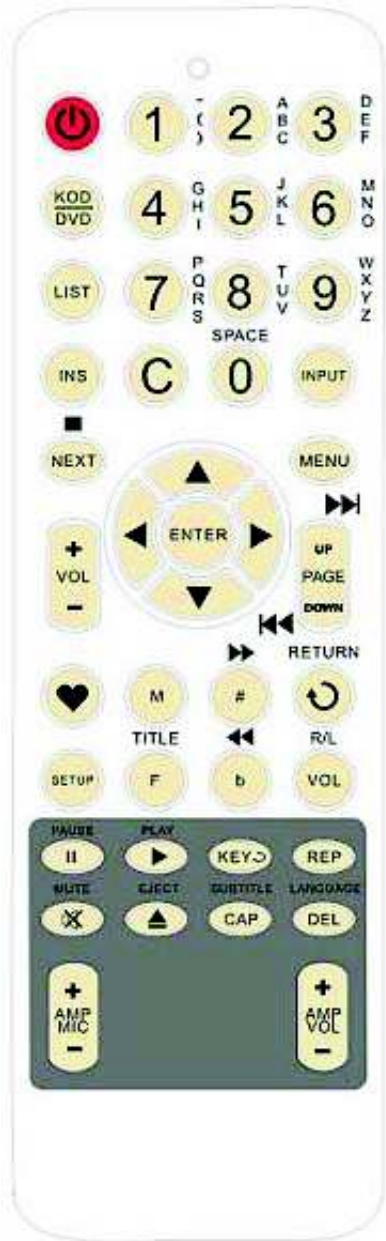 

POWER	Turns on/off system.
KOD/DVD	Switch the machine between KOD and DVD
LIST	Display the “List” menu, show the selected song list.
INS	Prioritize user choice of song to the top of the list in “List” menu.
C(Clear)	Delete the last command of user input.
INPUT	When playing song, put the selected a song into “List” menu and/or play the selected song immediately.
NEXT	Stop the current playing song. The first song in the selected song (the next song) list will be played next.
MENU	Display or hide “Main” menu.
VOL+/-	Adjust the volume of the song. The number of volume status will be displayed on the left screen when operating and disappear several seconds later.
PAGE	Display previous page or next page.
FAVORITE	Store the current playing song into My Favorite folder.
SETUP	Display or hide “Setup” menu.
M/F	Male/Female Key
# / b	Adjust the key of the song. Status of key will be displayed on the left screen when operating and disappear seconds later.
RETURN	Back to the previous menu.
VOCAL	Turn On/Off the vocal.
PAUSE	Pause current song or file.
MUTE	Audio output On/Off
PLAY	Play selected song or file.
OPEN/CLOSE	Open/Close DVD Rom
KEY	Reset the key to setup.
CAP	Function 1: When playing Mp3 song, switch background video from current video segment to the next. Function 2: In Media Record Mode, press this button to select different languages for inputting song information.
REP	When playing song, repeat current song once.
DEL	Delete song from the “list” menu or any recorded media stored by the user.

Operation

1. MAIN MENU



Press "MENU" on the remote controller to display the main menu.

Press "UP" "DOWN" "LEFT" and "RIGHT" to move the cursor.

Press "ENTER" to enter a sub-menu or press "RETURN" to go back to previous menu.



Select a song

You can select a song by many ways such as song number, language, artist, etc.

Select a song by song number

You can select a song by song number.

Step :

Press the number keys on the remote controller, the number shows on right top of the screen and if song exists, press "INPUT", the name will be displayed on top of screen and will play automatically.

E.g.

Select one song with "123456" song number; press 123456 buttons on the remote controller, then press "INPUT" to make the song play.

*After you have selected a song and there is no song playing, press "INPUT" will play that song automatically. If there are songs already pre-selected, it will store the song on the "list" menu

Select a song by language

You can select a song by language.

Step :

Press "UP" "DOWN" "LEFT" and "RIGHT" to move the cursor to "Language". Press "ENTER" to enter a "language" submenu. The menu indicates as left.

Press "UP" "DOWN" "LEFT" and "RIGHT" to move the cursor to where you want to go. Press "ENTER" to enter next submenu.





Press “PAGE up & down” to make page up and down, Press “UP” “DOWN” to move the cursor. Then you can select the song you really want to sing.



Select a song by Artist

In this menu, you can select songs by artist. The artists are divided to 4 groups, that is more convenient and easier to sort.



Step

Enter the “Artist” menu → Select one group → You can find many singers in it → Press “UP” “DOWN” or “LEFT” “RIGHT” to move the cursor, Press “PAGE up & down” to make page up and down → Choose a singer and press “ENTER” → System display all songs belongs to this singer → Press “UP” and “DOWN” to select song → Press “ENTER” to play the song.



Select a song by Favorite

My favorite songs are displayed in the “Favorite” menu.

Step

Enter the “Favorite” menu → System display favorite songs they have been added in → Press “UP” “DOWN” “LEFT” “RIGHT” to select one song → Press “ENTER” to play the song.



Select a song by Song search

In the “Song search” menu, you can select song/artist by inputting the T26 code of their names. “ABC” means first character. Press the first characters of words of the name of the song/ artist you want to select, the song/artist that matches the conditions will be displayed in the middle. Then you can select the song you really want to sing.



E.g. Input song name: “Days And Nights Missing You”.

Enter the “Song” submenu→Press button “3” for “D”→Press button “2” for “A”→Press button “6” 2 times quickly for “N”→ Press button “6” for “M”→ Press button “9” 3 times quickly for “Y”→the songs that matches will display in the middle→Press “UP” or “DOWN” to select one song→Press “ENTER” to play the song.



Select a song by Playlist

Left is the “Playlist” menu. You can choose the type you want to play songs in.



Select a song in My Collection

“My Collection” menu includes songs recorded by user.

2. LIST MENU

List menu & Edit selected songs list

You can press “LIST” button on the remote controller to enter “LIST” menu. “UP” and “DOWN” can be used to move the cursor. Press “DEL” will delete the current song. “INS” is to insert the current song to the top of the selected song list.

E.g.

There are 4 songs have been selected: A, B, C and D by sequence.

Enter the “List” menu → A, B, C and D list → Press “UP” and “DOWN” to move the cursor → move cursor on D → Press “INS” → D is set to the top of the selected song list, the sequence is: D, A, B, C → Move cursor on B → Press “DEL” → Song B is deleted and the sequence is: D, A, C

3. SETUP MENU



Playlist

Set the different type of playlist when machine is on random play mode.

Song Update

Update the new songs by USB port or disc.



System Update

Update the new version of software by USB port or disc and will show the current version of software.



Menu language

Set the language of MENU.



Video

Select the video format according to the format (NTSC, PAL, 480p, 720p, 1080i or 1080p) of the television being used.

Select the video output from “AV and Component” or HDMI(recommend)



Disc Recording

You can copy media files from VCD/DVD to HDD. The system supports MPEG1/MPEG2 files.

The left part is preview window. The right part of the menu lists all supported songs in the disc.

Use “UP” “DOWN” move cursor to select one song, use “PAGE up/down” display previous page or next page. Press “PLAY” to start preview, press it again to stop previewing the song.

Press “ENTER” to select the song that you want to record. If the song has already been selected, it will delete the selected song from list.

Press “MENU” to start recording. The song number will be pre- assigned from system.



If you want to edit information of song, press “INPUT” to display the song info screen.

The song information screen will be displayed on the left:

Use “UP” “DOWN” to highlight the row.

Press “INPUT” to save the information and exit to previous page.

Press “RETURN” to cancel and exit to previous page.

Press “ENTER” into edit information menu.



The edit information menu as left:

Use “UP” “DOWN” “LEFT” and “RIGHT” to move cursor to select character.

Press “ENTER” or “NUMERAL” to input the letter.

Press “INPUT” to save the information and exit to previous page.

Press “RETURN” to cancel and exit to previous page.

Troubleshooting

If the problem should arise, first check the following:

1. Are the connections correct?
2. Is the set being operated as described in the owner’s manual?
3. Are the other components operating properly?

- | | |
|--|--|
| Power does not turn on | <ul style="list-style-type: none"> • Check that the power plugs are securely inserted into the system’s AC inlet • Check if the power cord is securely inserted into the wall power outlet • Check the wall power outlet • For the protection of the hard drive, the machine is designed to not turn on for 20 seconds after shutting down the player. |
| No sound is produce | <ul style="list-style-type: none"> • Check the amplifier connections • Check the amplifier’s “Input Select” |
| No picture appears | <ul style="list-style-type: none"> • Check the connections of the System video output terminals and the TV’s input terminals. • Check the “Video” setting • Set “Video Format” according to the format (NTSC, PAL, 480p, 720p, 1080i or 1080p) of the TV being used. |
| No picture appears with HDMI connections | <ul style="list-style-type: none"> • Check the connections of the HDMI connectors. • Check the “Output” assigned to the “HDMI”. • Press “KEY” ten times to reset the “Video Format” and “Output” back to original setting. The output will be assigned to “AV and Component” and picture will appear again. |